



STT ENGINEERING SOLUTIONS

DRIVING INDUSTRY FORWARD

CS14 / SECTION 51

CUMMINS ELECTRICAL WIRING
DIAGRAMS

Assembly reference: 3719 0029 63

Original catalogue pages 146-151 | 6 source pages


Parts identification reference. Quote the OEM part number, quantity, rig model and serial number when enquiring. Match the fitted component and catalogue revision before ordering.

Source: Atlas Copco Craelius AB, Christensen CS14 spare parts list 6991 1447 50e (07-12). Original technical pages and source notices retained. STT branding identifies this compiled reference; it does not imply OEM authorship or authorised-dealer status.

Electrical wiring diagram

Cummins QSB 5.9 Start panel, Diesel

3719 0029 63

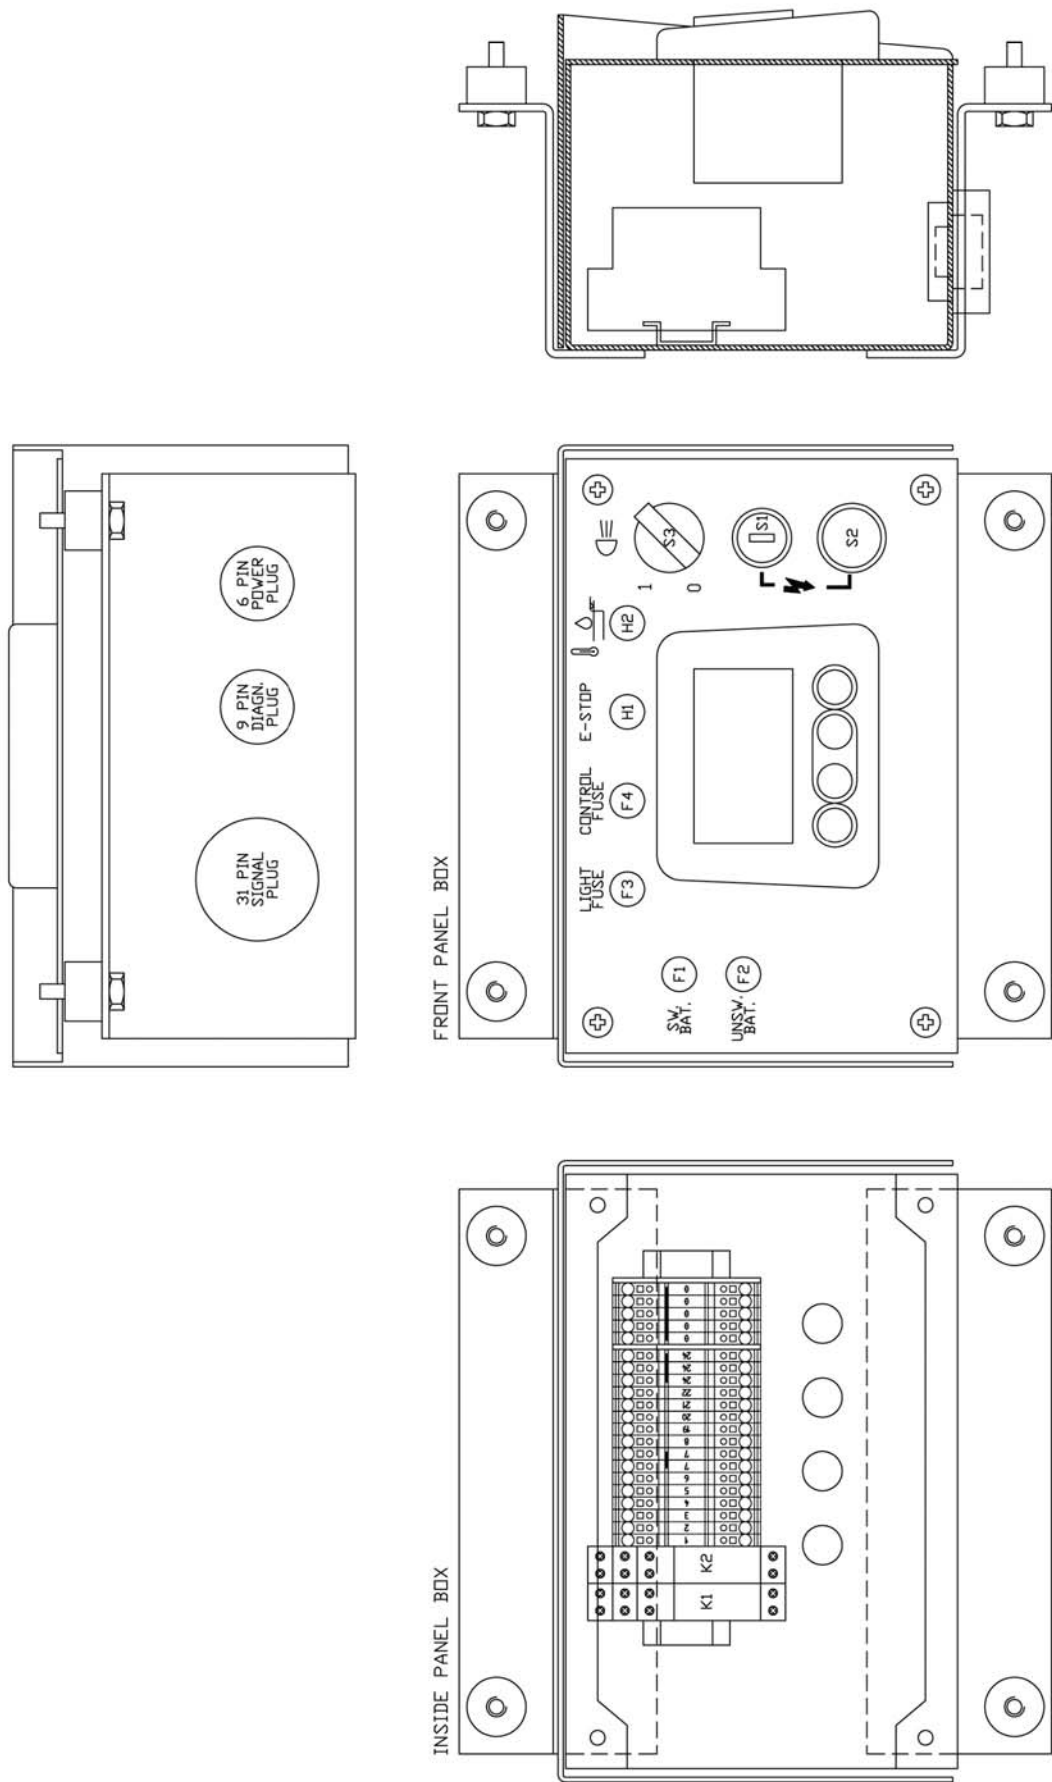

Electrical wiring diagram


Cummins QSB 5.9 Start panel, Diesel

3719 0029 63					
Pos.nr	AC nr	Megnr	Qty	Description	Type, data
F3,F4		130148	2	FUSE HOLDER 5x20 FOR PANEL	5x20
F4		135013	1	FUSE	3.15A 5x20
F3		135018	1	FUSE	10A 5x20
		813023	1	PANEL DIESEL START Cummins	24VDC
K1,K2	3718 0401 92	934023	2	RELAY (PLUG IN)	16A 24VDC 1-SW. CON
K1,K2	3718 0401 92	934025	2	RELAY SOCKET	8-PIN 1-2 SW. CON
H1,H2		943067	2	LED LAMP RED M14	24VDC
S2,S3	3217 0010 72	943320	2	ADAPTOR FOR ZB	
S2	3217 0012 00	943342	1	PUSH BUTTON	BLACK
S3	3217 0012 11	943369	1	TURNING HANDLE	2-STATE

Electrical wiring diagram

Cummins QSB 5.9 Start panel, Diesel


3719 0029 63

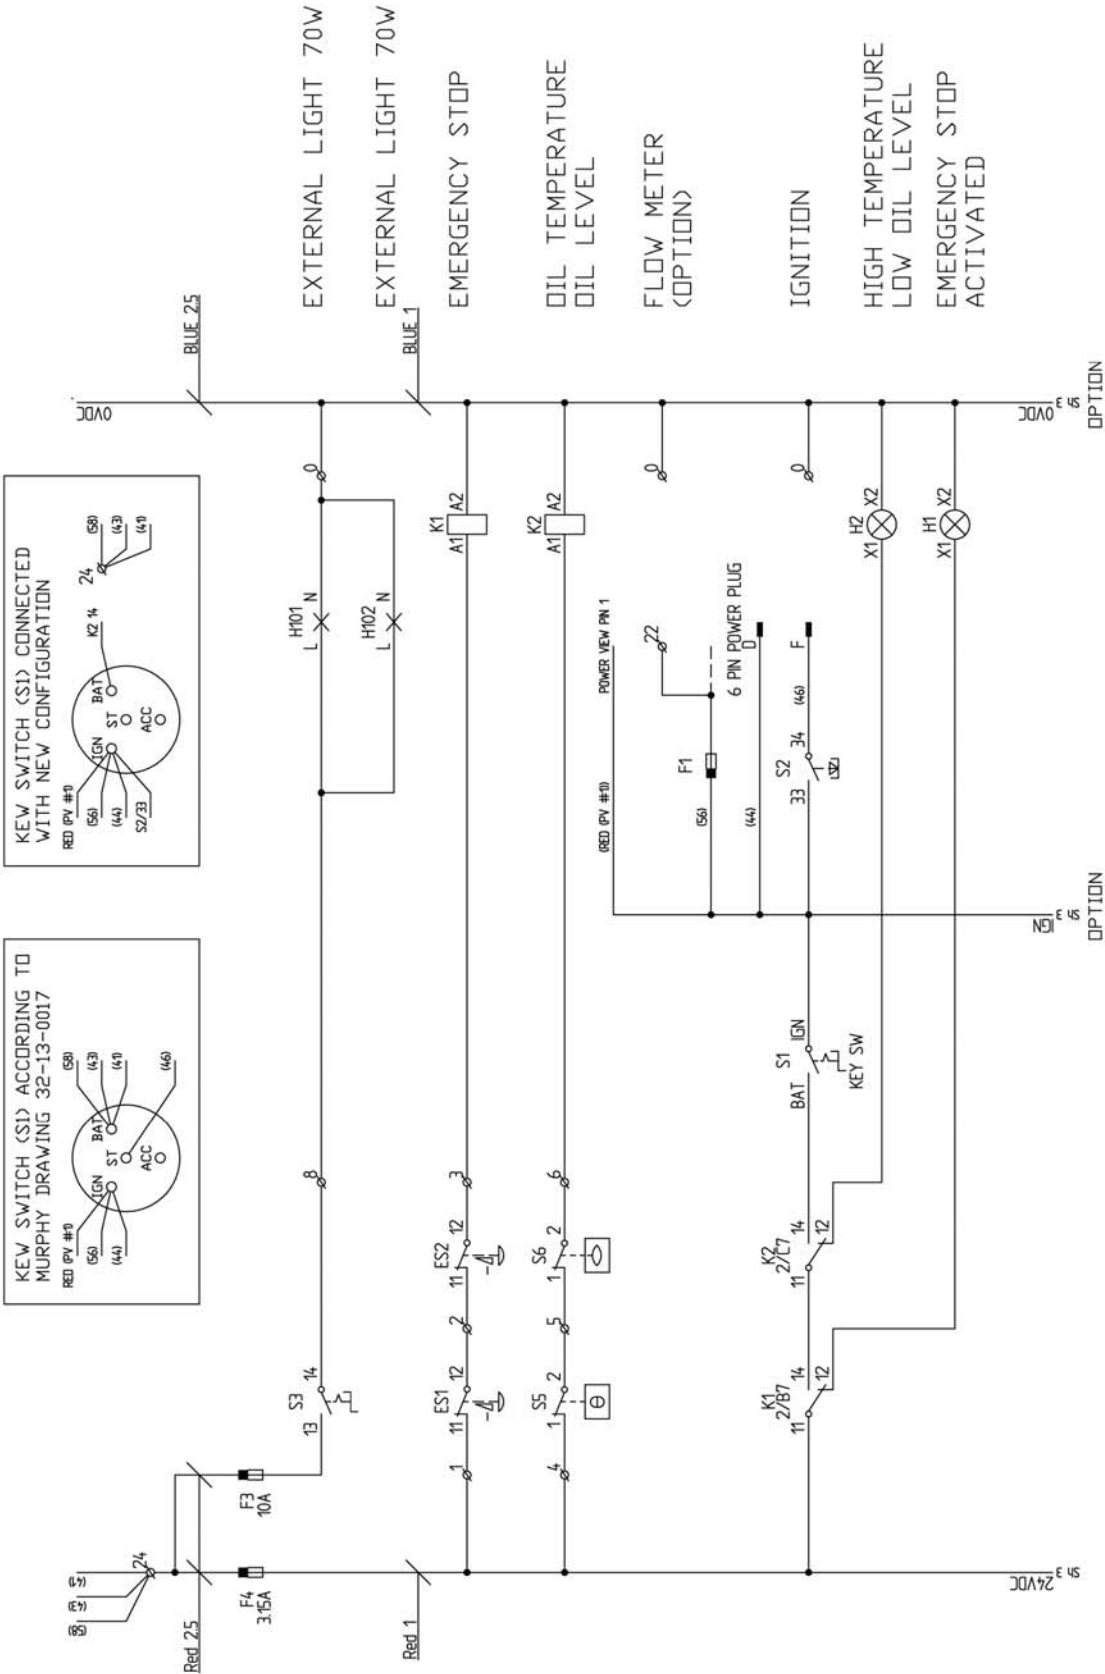

Electrical wiring diagram

Cummins QSB 5.9 Start panel, Diesel

3719 0029 63

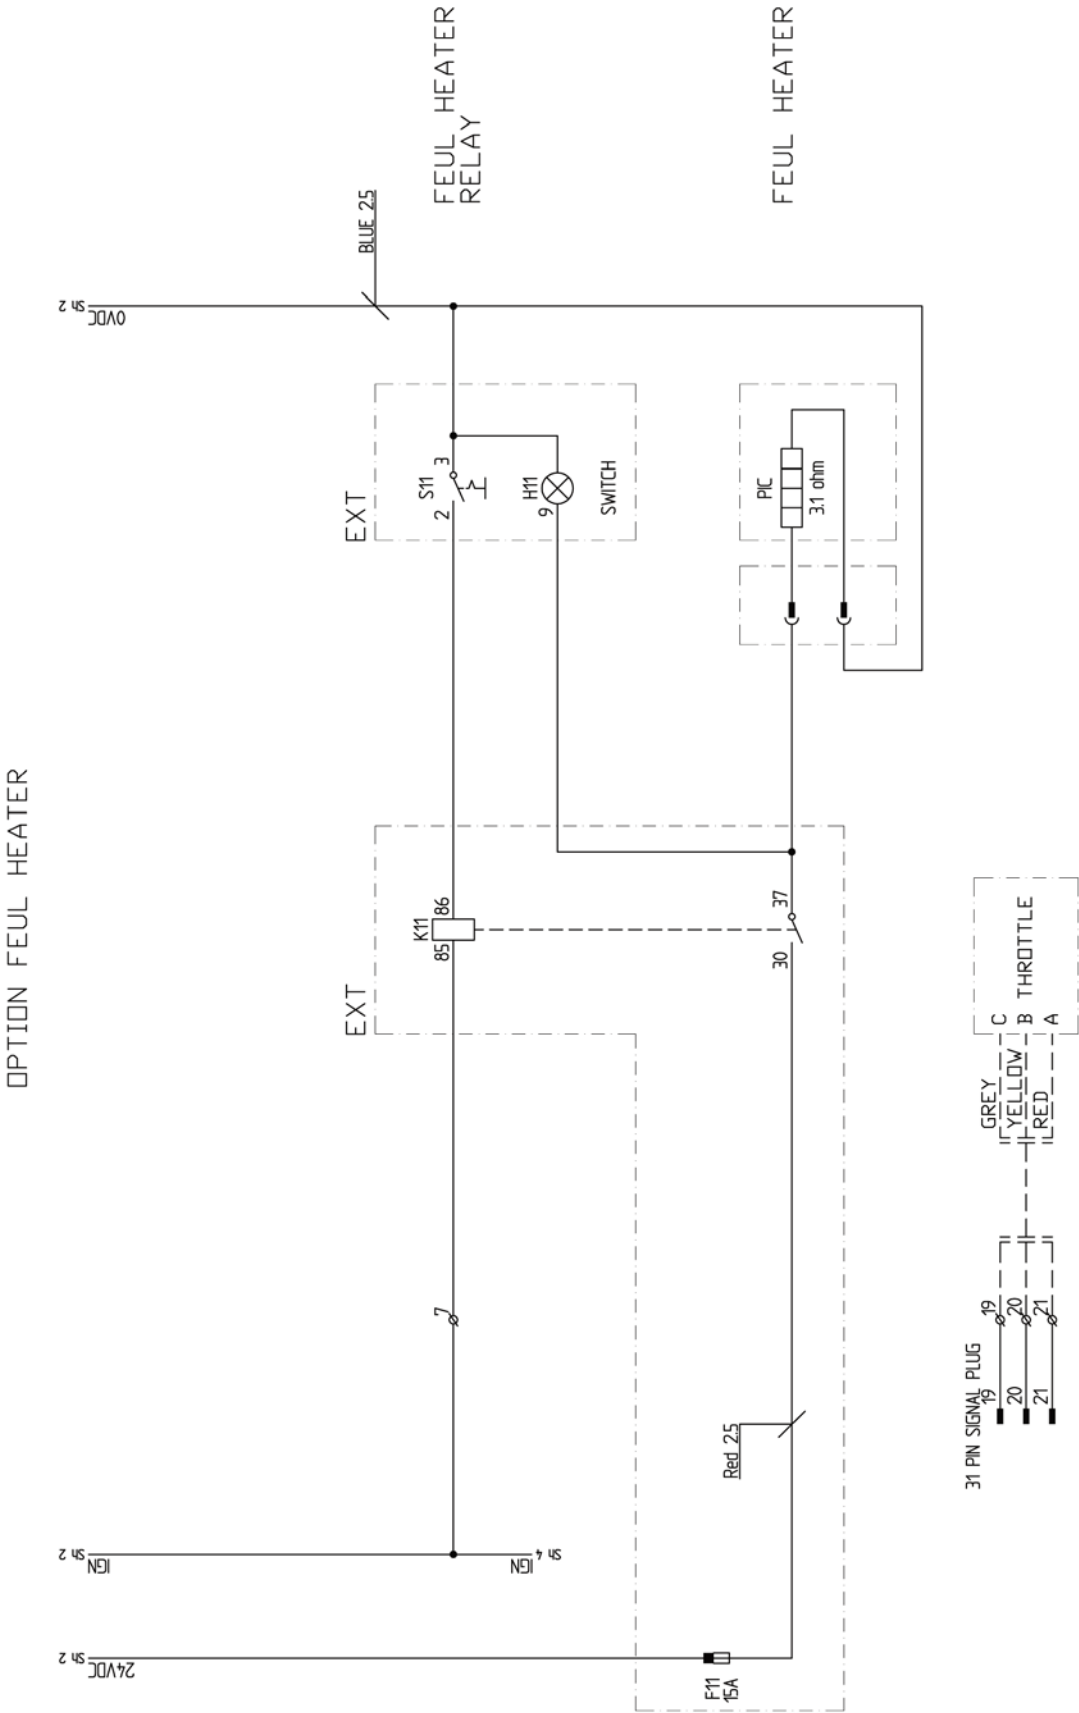

Electrical wiring diagram

Cummins QSB 5.9 Start panel, Diesel

3719 0029 63

